


## 3430-0834 and 3430-0836 Installation Instructions

Form 949-Rev190226


The Internal Single Tank Flush kit is to be installed on the apparatus and uses water pump pressure and flow to flush the proportioner with the ease of a flip of a switch.

### Installation:

- Warning: Make sure electrical power is disconnected from the battery and the Foam Tank Shut-Off valve is closed before starting installation.
  - Use AWG 16 or 14 automotive wire for electrical hookup.
  - Use only brass or stainless steel fittings.
  - Use hoses rated for 500 psi and compatible with fluids being used.
  - When flushing system do not exceed 100 psi water pressure.
- Cut panel to dimensions shown and install placard and switch.

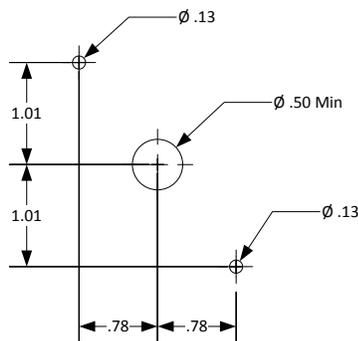

- Install per the following schematic

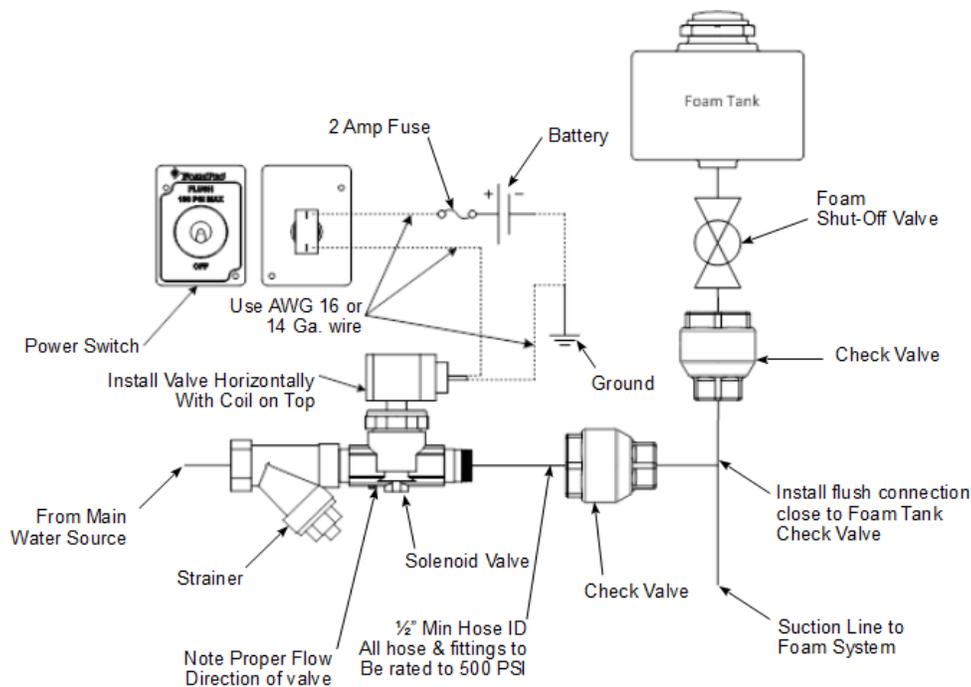

### Operation:

- Close Foam Tank Shut-Off valve.
- Open discharge line or cal/inject valve.
- With water pump running, turn flush switch to on position and run foam system until output is clear.
- Turn off foam system, return Flush switch to OFF position, and close discharge or cal/inject valve.
- Keep Foam Tank Shut-Off valve closed until foam is required.


## 3430-0835 and 3430-0837 Installation Instructions

Form 949-Rev190226


The External Single Flush kit is to be installed on the apparatus with a handy panel hook-up for use with an external water or air source for flushing and winterization.

### Installation:

- Warning: Make sure electrical power is disconnected from the battery, and the Foam Tank Shut-Off valve is closed before starting installation.
  - Use only brass or stainless steel fittings.
  - Use hoses rated for 100 psi or greater and compatible with fluids being used.
  - When flushing system, do not exceed 100 psi air or water pressure.
- Cut panel to dimensions and install placard and fittings as shown.

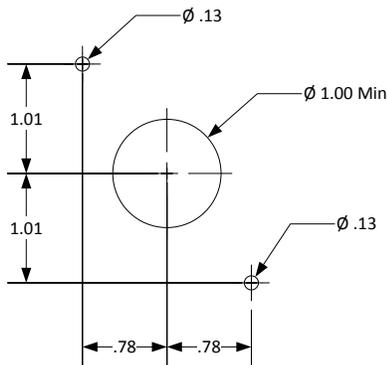

- Install components per the following schematic.

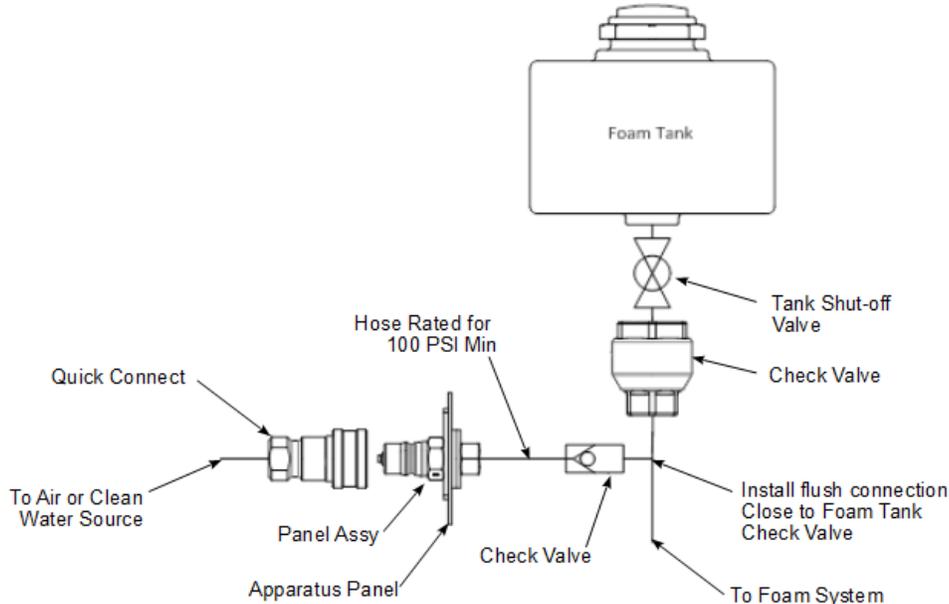

### Operation:

- Close Foam Tank Shut-Off valve.
- Open discharge line or cal/inject valve.
- Connect water or air supply to panel fitting, turn on water or air supply, and run foam system until output is clear.
- Turn off foam system, turn off water or air supply, close discharge or cal/inj valve, and disconnect supply at panel.
- Keep Foam Tank Shut-Off valve closed until foam is required.