


TELESCOPIC POLE LAMPHEAD REMOVAL INSTRUCTIONS

NOTE: DISCONNECT POWER PRIOR TO LAMPHEAD REMOVAL.


1. Loosen the set screws to remove the lamphead from the pole.

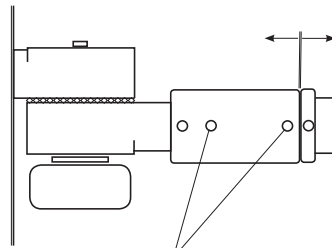

Loosen the set screws.

2. Slide the lamphead off of the pole.

NOTE: This diagram represents standard AC wiring. DC wiring may vary depending on lamphead model.

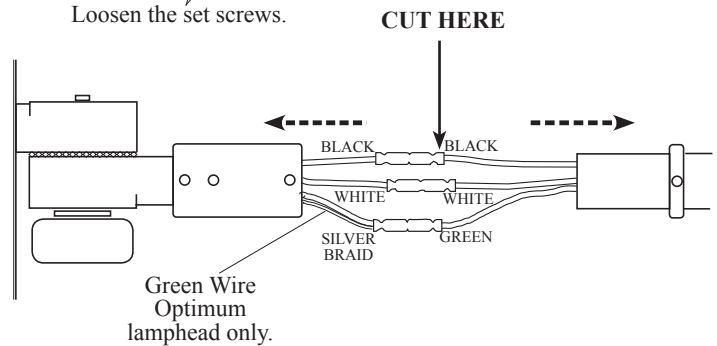

3. Disconnect the lamphead wires from the pole wires. Ensure that the wires are clipped on the pole side of the butt connectors.

**DO NOT DISASSEMBLE REAR OF LAMPHEADS.
THIS WILL VOID THE WARRANTY.**

